



WELCOME!

Thank you for buying the Slingbox™ SOLO. Follow these instructions to connect your new Slingbox and start watching your TV anywhere on your laptop or mobile*.

 
For more information on setup, visit support.slingmedia.com.

WHAT'S IN THE BOX:


A Quick Start Guide




B Slingbox SOLO

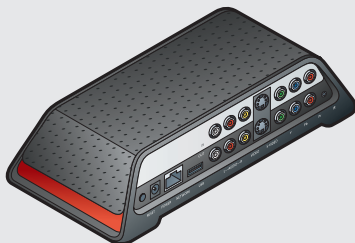


C Accessories Pack

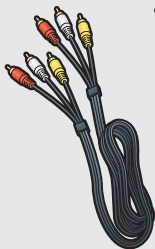 


Composite A/V
Cable

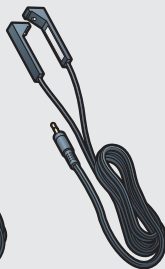 


Remote Control
IR Cable

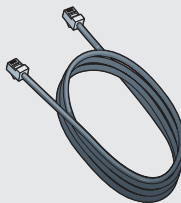 

Ethernet
Cable

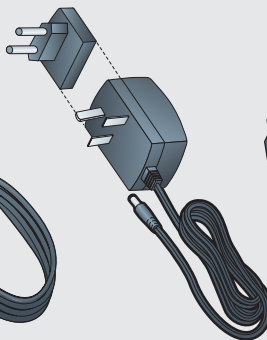 

Power
Adapter

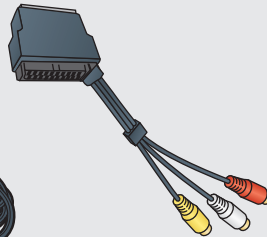 

SCART to RCA
Adapter



STEP 1: CONNECT VIDEO/AUDIO SOURCE

 
The Slingbox SOLO can connect to one High Definition (HD) device or one Standard Definition (SD) device such as a DVR, Cable Box, Satellite Receiver or DVD Player.

Visit <http://support.slingmedia.com> for a list of compatible devices.

HD COMPONENT and AUDIO CONNECTIONS

If your A/V source has component output, use a component cable (sold separately).

- Connect the component cable (green, blue, red) from the A/V source output to the Slingbox Component IN. This supplies the video signal only.
- To connect audio, remove the composite A/V cable from your accessories pack.
- Connect the red and white composite connectors from the A/V source output to the Slingbox Audio IN.

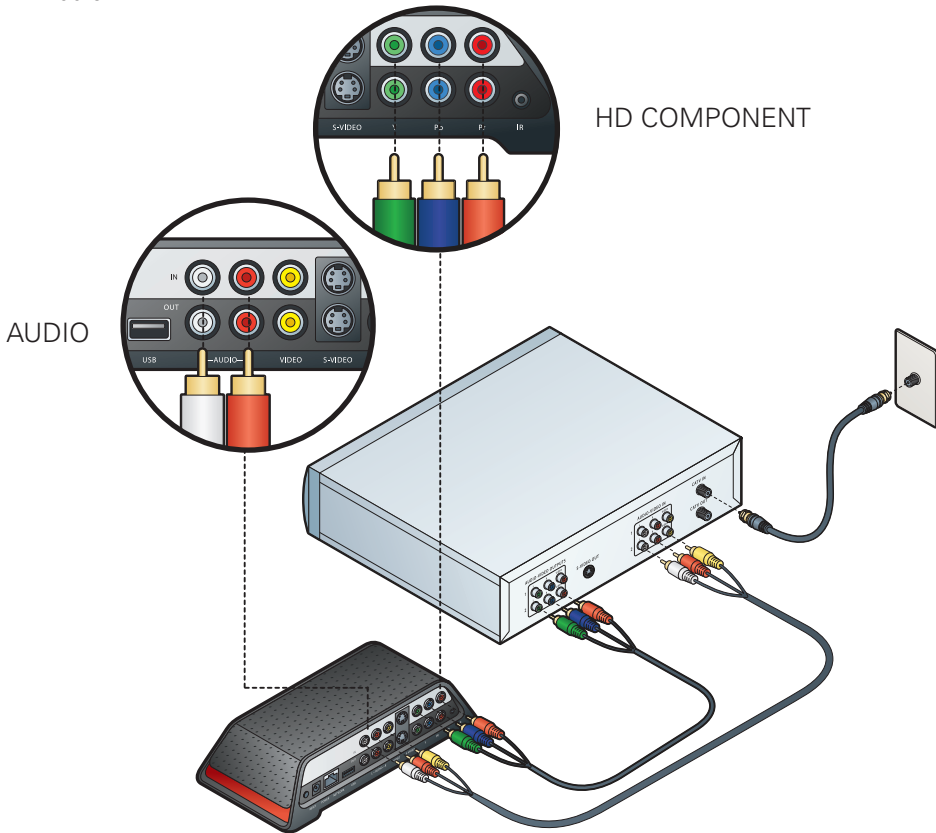


*To watch your Slingbox on your mobile device you must purchase SlingPlayer™ Mobile software separately. There are versions of SlingPlayer Mobile specific to many PDAs, mobile phones and smart phones. A free 30-day trial is available at <http://www.slingmedia.com>. SlingPlayer Mobile is not compatible with all PDAs, mobile phones, smart phones or providers. It may not work or be used in all countries. Note that some providers charge additional usage fees for video streaming. Go to <http://www.support.slingmedia.com> for a list of supported mobile devices.

SCART/COMPOSITE CONNECTION

- Remove the composite A/V cable from the A/V Pack.
- Connect the composite A/V cable to your A/V source OUT.



For SCART connections, use the supplied SCART to RCA adapter. (NOTE: The supplied SCART to RCA adapter will only work with the composite A/V cable.)

 - Connect the other end of the composite A/V cable to the Slingbox IN connection.

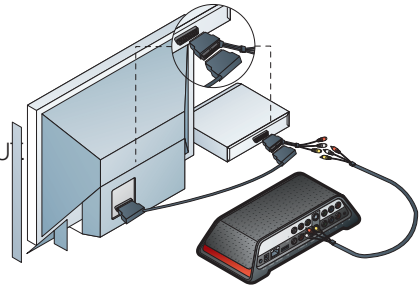

S-VIDEO CONNECTION

  - Connect the S-Video (sold separately) and audio cables to your A/V source OUT.
- Connect the other end of the S-Video and audio cables to the Slingbox IN connection.

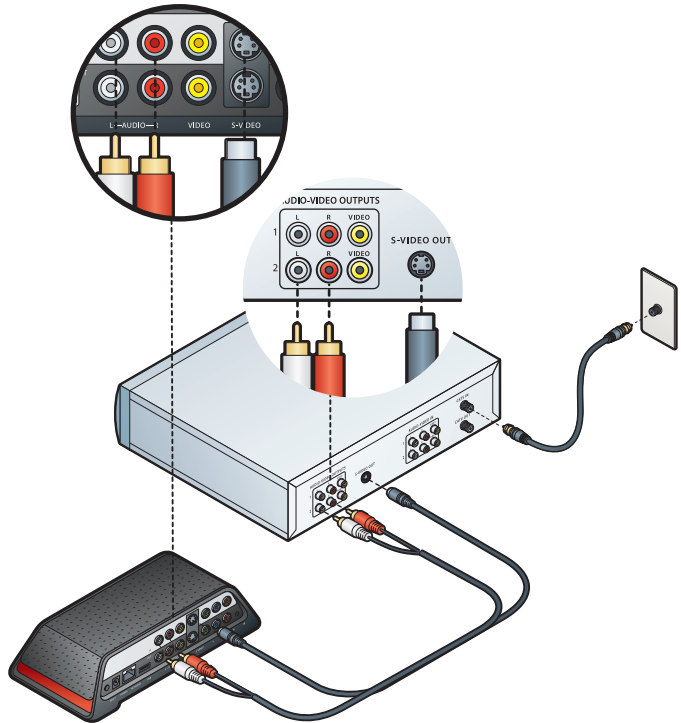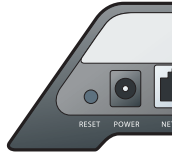





STEP 2: CONNECT REMOTE CONTROL IR CABLE

- Remove the remote control IR cable from the accessories pack.
- Connect the remote control IR cable to the IR connection on the Slingbox.
- Place the remote control IR cable heads on the top or bottom of your DVR and/or Cable/Satellite Box so they point at its IR sensor.

 Make sure they extend out far enough over the front of the device to send a signal to your DVR or Cable/Satellite Box. You may want to affix the remote control IR cables using the adhesive pads after installation is complete.

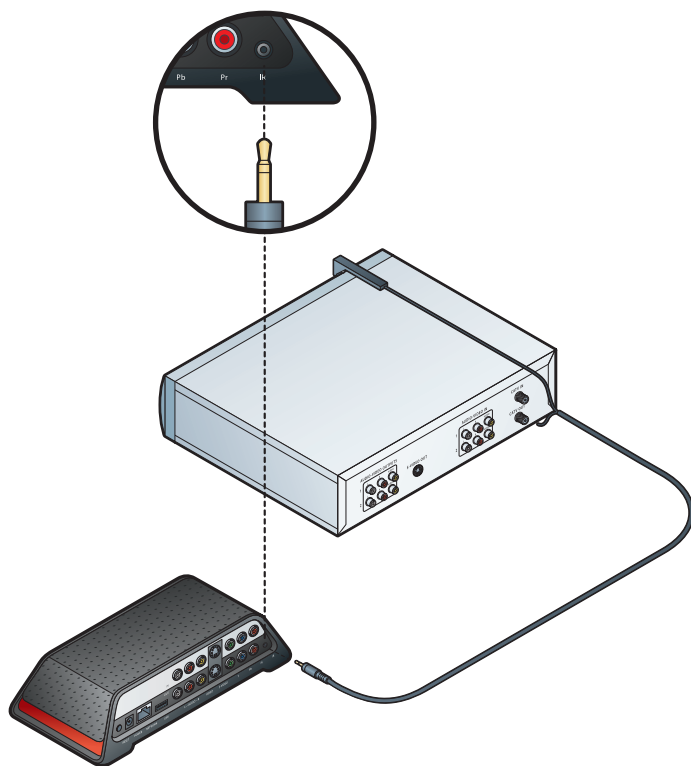

 TIP: The IR sensor is on the front of your Cable/Satellite box or DVR, usually behind a dark, sometimes reddish plastic window. If you don't see the sensor, shine a flashlight through the window and look for a small bulb similar to the one on the end of the remote control IR cable.

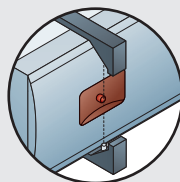




STEP 3: CONNECT TO YOUR NETWORK

- Remove the Ethernet cable from the accessories pack.
- Plug one end of the Ethernet cable into the Slingbox NETWORK connection.
- Connect the other end to your home network router.

 The Slingbox works with any high-speed Internet connection or broadband home network. You must have a router to use the Slingbox.

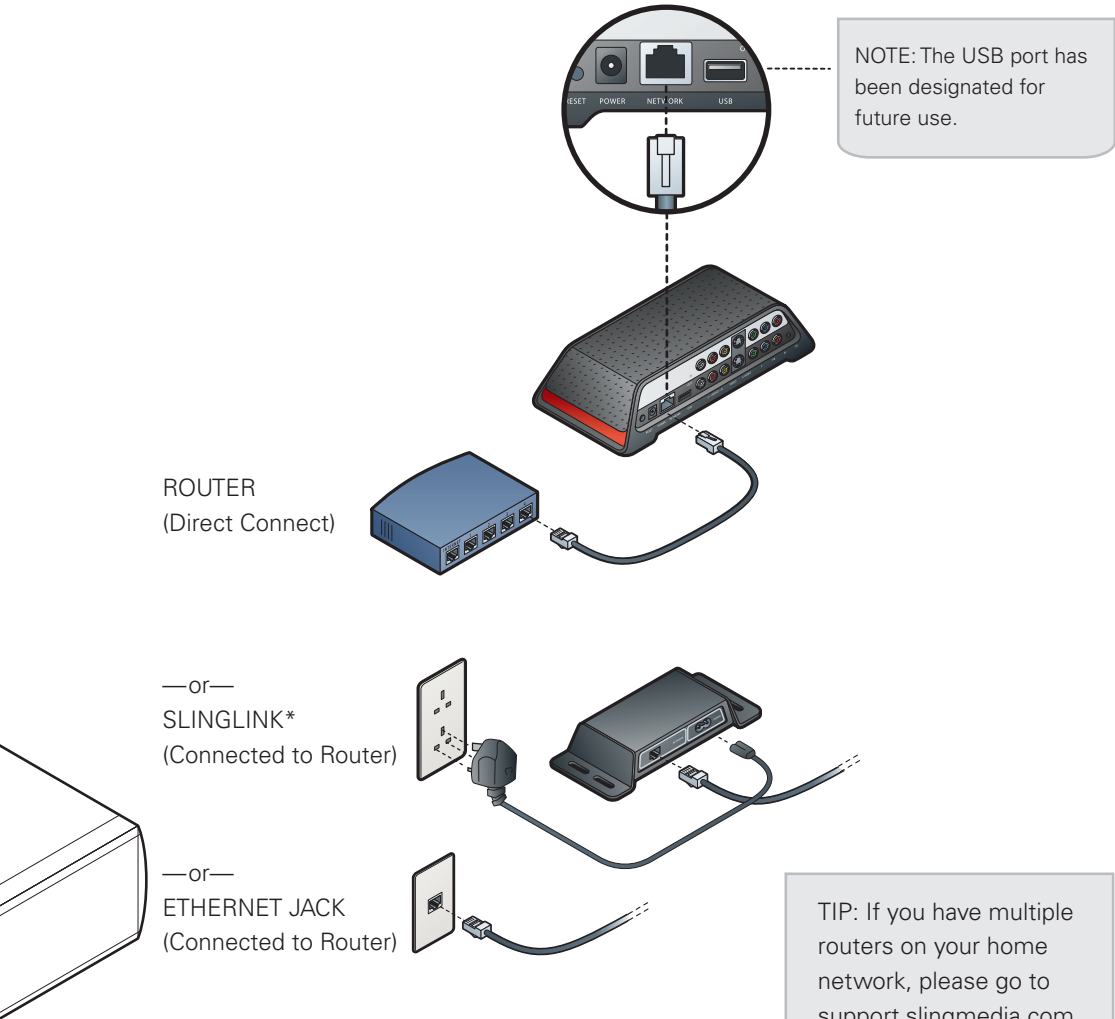


* SlingLink sold separately.




STEP 4: CONNECT POWER SOURCE

- Remove the power adapter from the accessories pack.
- Connect the power adapter into the Slingbox POWER connection.
- Plug the power adapter into an electrical outlet.

 *When plugged in, the lights blink a few times as the Slingbox starts up.
Once the lights stop blinking, your Slingbox is ready.*

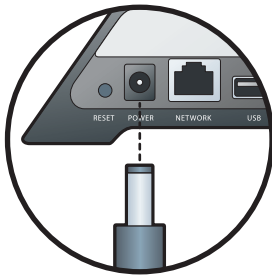

NETWORK POWER

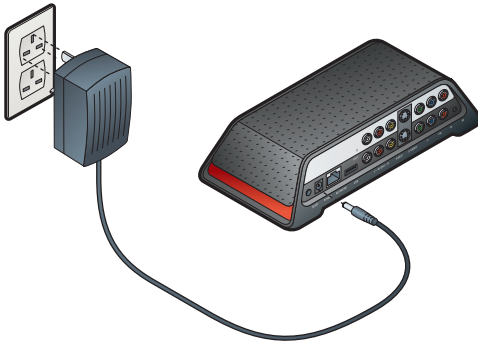 

TIP: If the network light does not come on within 30 seconds, make sure that the Slingbox is correctly connected to your network/router.

See Troubleshooting on the reverse side for more solutions, or go to: support.slingmedia.com



WHAT YOU'LL NEED:

To enjoy your Slingbox, you will need:

- TV signal (Cable, Satellite, Freeview/DVR)
- Broadband Internet Service
- A router on a home network
- PC or Mac Computer

You will also need to write down the type, brand and model of the audio/video device that will be connected to your Slingbox SOLO. You'll need this information later on for the software portion of the setup.

DEVICE TYPE: (EX: Satellite) _____

BRAND: (EX: Thompson) _____

MODEL: (EX: DTI2300) _____

WHERE IT IS CONNECTED:

- COMPONENT
- SCART/COMPOSITE
- S-VIDEO



STEP 5: SOFTWARE SETUP

Now that you have the Slingbox setup, you are ready to install the software.

Before you begin, make sure your computer is on the same network as your Slingbox.

Please go to <http://download.slingmedia.com> and follow the instructions to download the latest SlingPlayer software for your computer.



STEP 6: USING YOUR SLINGBOX

Congratulations! You are now ready to enjoy your TV on your PC, Mac or mobile*—at home or 3,000 miles away—via the Internet. Thanks for buying the Slingbox SOLO.



*To watch your Slingbox on your mobile device you must purchase SlingPlayer™ Mobile software separately. There are versions of SlingPlayer Mobile specific to many PDAs, mobile phones and smart phones. A free 30-day trial is available at <http://www.slingmedia.com>. SlingPlayer Mobile is not compatible with all PDAs, mobile phones, smart phones or providers. It may not work or be used in all countries. Note that some providers charge additional usage fees for video streaming. Go to <http://www.support.slingmedia.com> for a list of supported mobile devices.

TROUBLESHOOTING

1. If the power light is not on:

Disconnect the power cable from both the Slingbox and the electrical outlet and reconnect them - making sure that they are secure.

2. If the network light is not on:

Disconnect the Ethernet cable from the back of the Slingbox and re-insert it. You will hear a click when it is fully inserted.

Do the same with the other end of the Ethernet cable, making sure that it is attached to your router, optional SlingLink™ or optional wireless game adapter.

Make sure your router and/or wireless game adapter is on the same network as your Slingbox.

3. If the network light is continuously blinking:

Press and hold the reset button on the back of the Slingbox for five seconds. The lights on the front of the Slingbox quickly flash from left to right, then flash slowly. This resets the Slingbox to factory settings.

Turn your router off and back on again. *Note: Most routers do not have on/off switches. You may need to unplug and plug the router back into the electrical outlet.*

4. The Setup Wizard and the SlingPlayer™ application do not discover the Slingbox on your network:

Some firewall security software blocks the Slingbox from being recognized on your home network. If this occurs, you need to change your security software settings to see the Slingbox as a device on your network.

5. You don't see your audio/video source while installing the SlingPlayer software:

Re-check the cable connections between your A/V devices and the Slingbox.

Make sure the cables are fully inserted into the connectors on the back of the Slingbox. The cables should fit snugly.

6. The Setup Wizard and the SlingPlayer application are not controlling your device:

Make sure the remote control IR cable is fully inserted.

Move the emitters to a different location on the front of your Cable/Satellite box or DVR.

7. If your TV is no longer receiving a signal:

Connect the output of the Slingbox to your TV's inputs. Check to make sure your TV is set to the correct input.

NEED MORE HELP?

Go to support.slingmedia.com.

Copyright © 2007 Sling Media, Inc., Sling Media, Slingbox, SlingCatcher, SlingPlayer, SlingPlayer Mobile, SlingStream are the registered trademarks of Sling Media, Inc. Other products and companies mentioned are the trademarks of their respective owners and not Sling Media, Inc. This product is designed in the United States and manufactured in China. 082-10013

