


FAQ

Tutorial : Setting up wireless connection (Screenshots with troubleshooting)

13-05-2011



Important: Please make sure you have first have a TOPFIELD wireless dongle plugged into your unit. The below instructions apply to models : TF7100HDPLUS, TRF2400 and TRF2460

Step 1

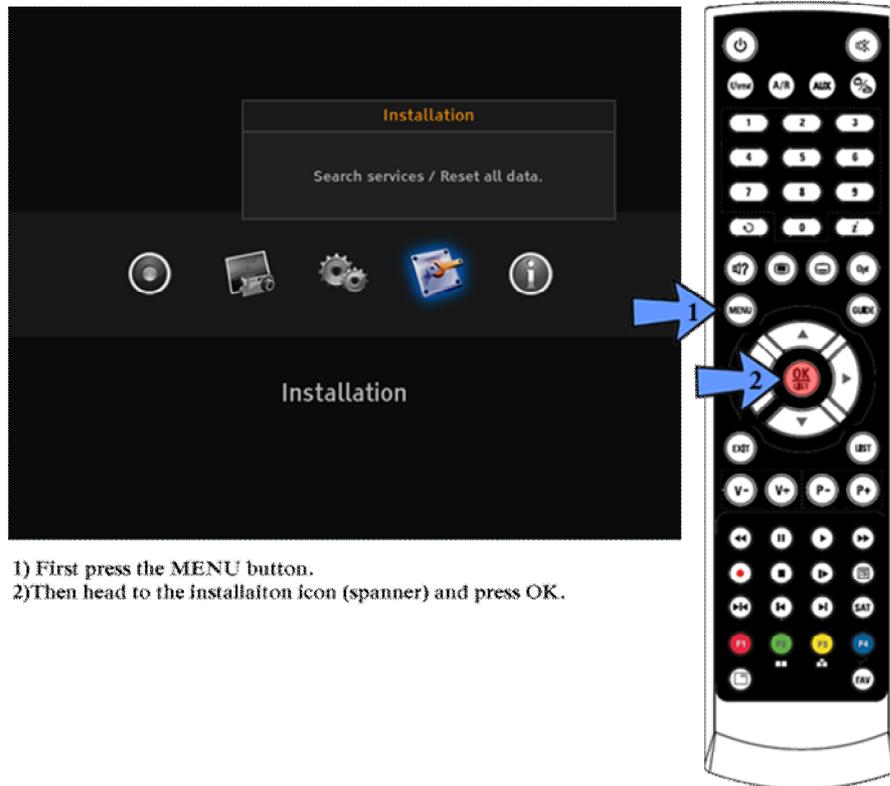



- 1) First press the MENU button.
- 2) Then head to the installation icon (spanner) and press OK.

Step 2

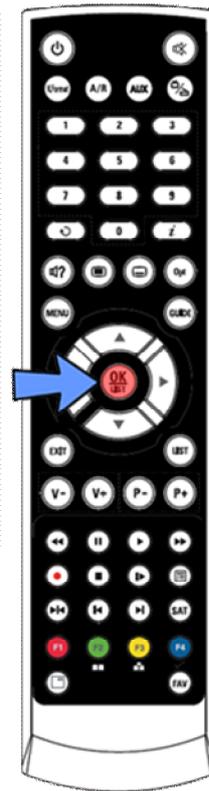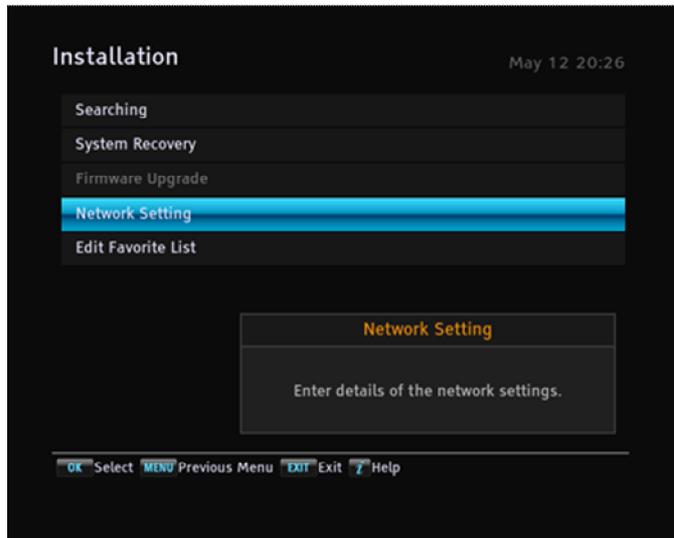

Head to Network Setting and press OK

Step 3

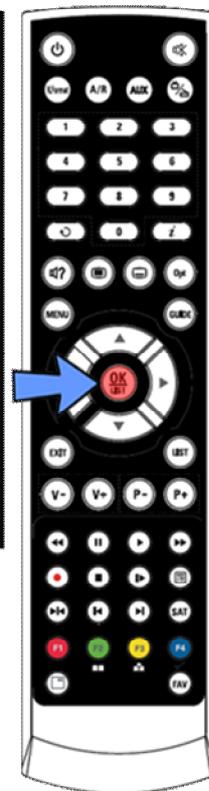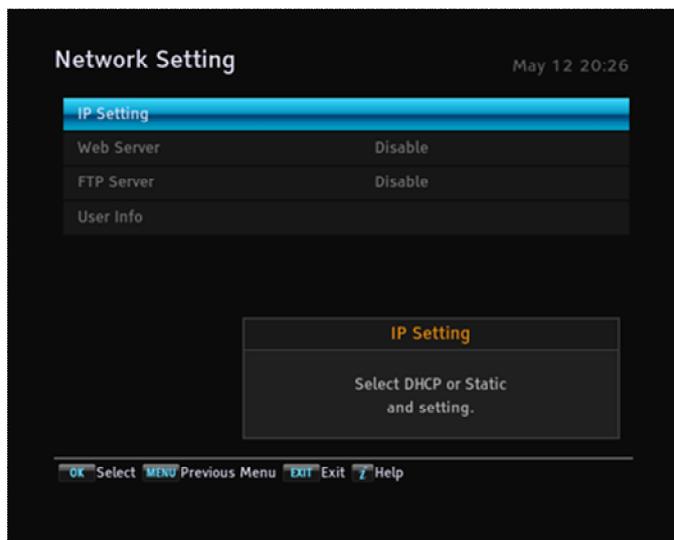


Press OK on top of IP Setting.

Step 4





Head down to **Wired/Wireless LAN** and use the **Right** key button to change it to **Wireless**.

Step 5

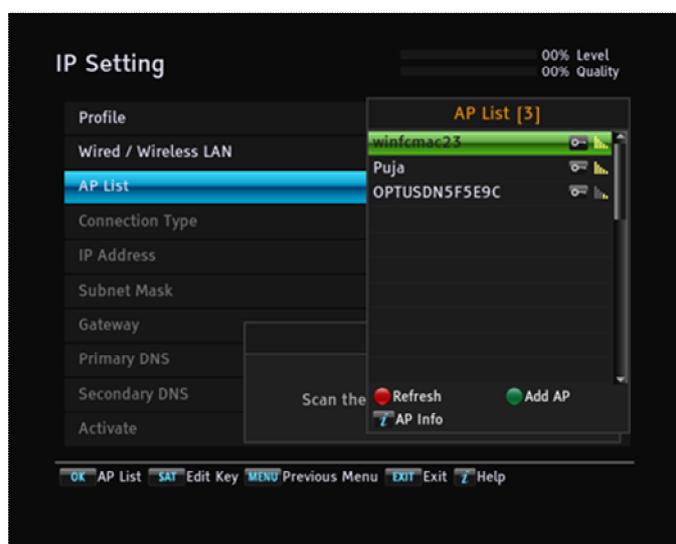



Go down to **AP list** and press **OK**. The **AP List** will appear which will detect the wireless networks available in your area. Select the name of the network for your router and press **OK** once more.

Step 6

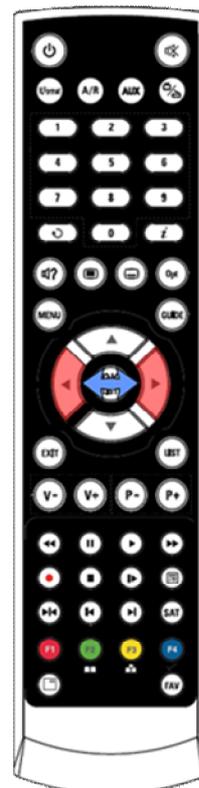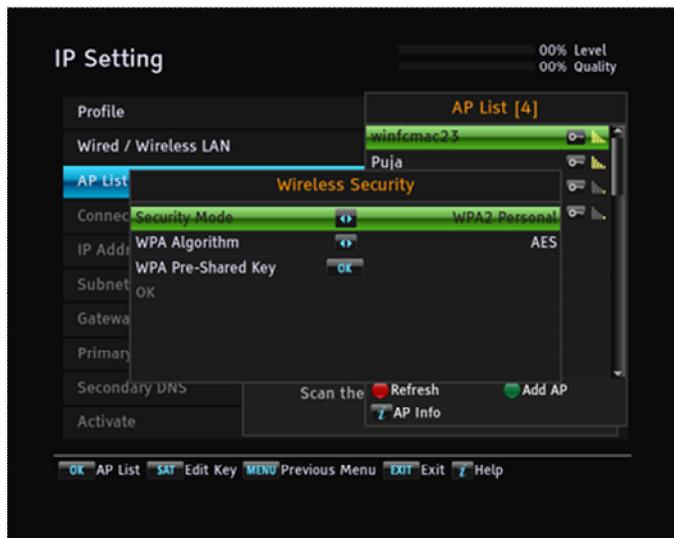


Now you will need to select the Security Mode that was set on your router . There are three modes you can choose from : WEP, WPA and WPA2. Use the left and right arrow on your remote to select the correct one. Once you are done , head down to either Key 1 (for WEP) or WPA pre-shared key to enter your password and press OK.

Step 7

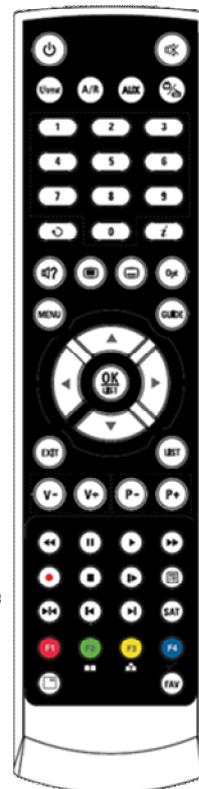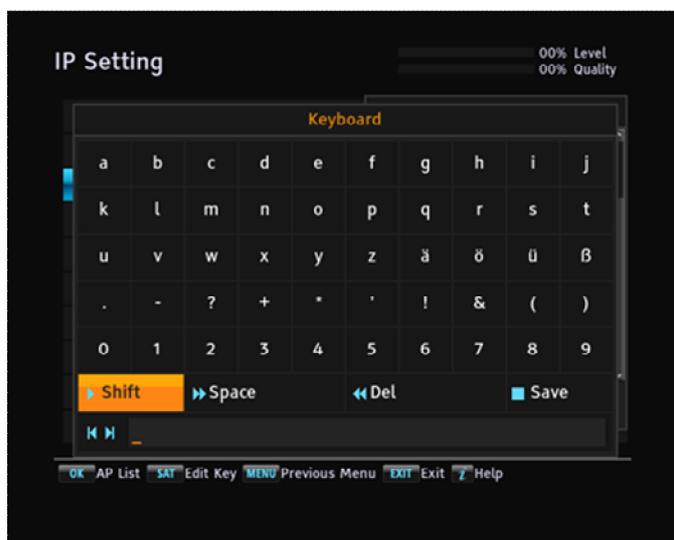


A keyboard will appear for you to enter your WEP or WPA key , to get capital letters or additional characters press OK on top of Shift. When you have entered your password go to Save and press OK.


Step 8

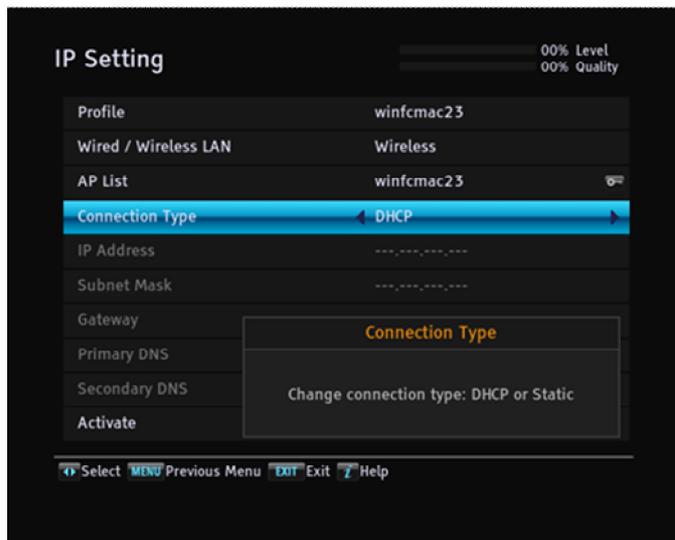


Now head down to connection type, you have a choice of two: DHCP (router assigns IP address, recommended setting) or Static (where you must manually enter your IP address and other settings, for more experienced users). Use the Left and Right arrows to select the type of connection you want. Then head down to Activate and press OK.

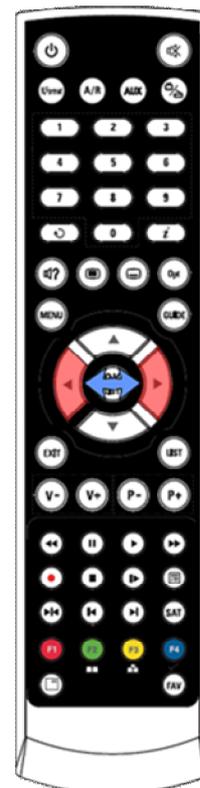


Step 9

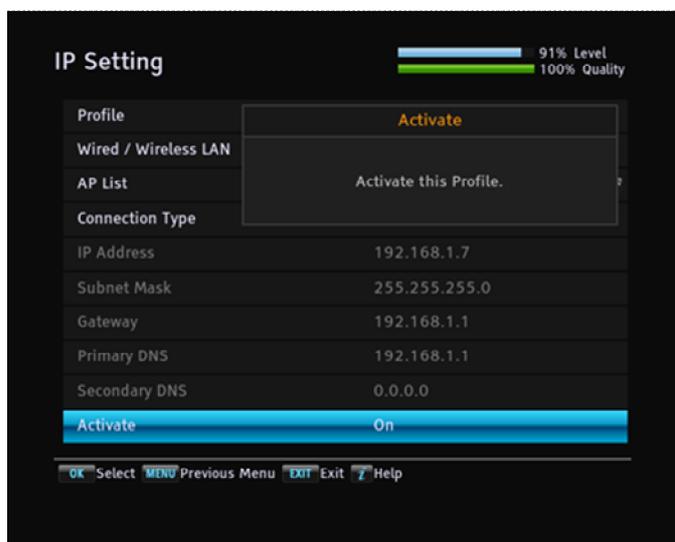

Wait upto 10 seconds for the IP Address, Subnet Mask and remainder of settings to populate with numbers. You have now connected your unit to your router.


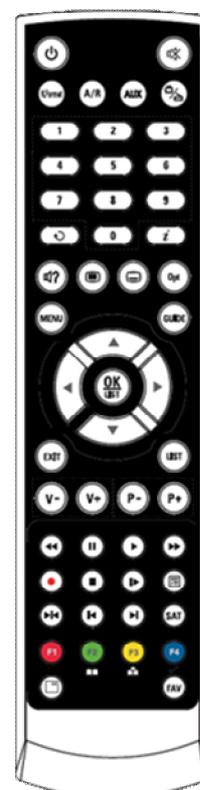


Step 10

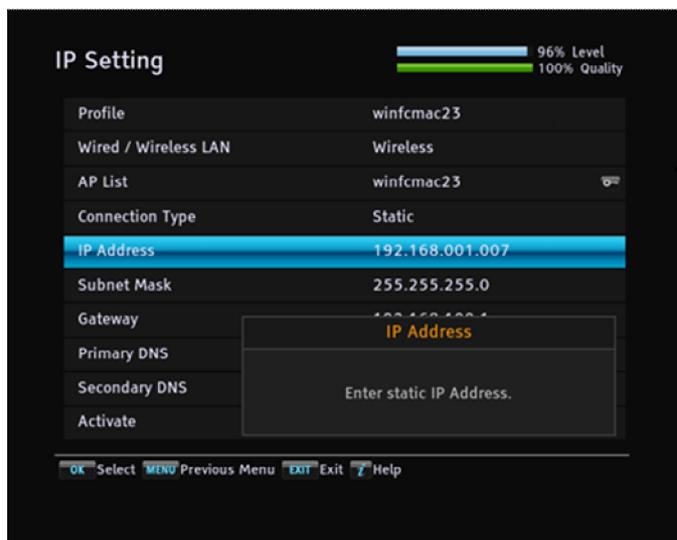



If you chose a static connection type you will need to enter your IP address and other settings. When you set the connection to static, dummy numbers are given. Highlight the setting that you want to change then use the numbers on your keypad to adjust them. If you need to enter an address of 192.168.10.1 you will need to enter 192.168.010.001. When you are done head down to Activate and press OK

Step 11

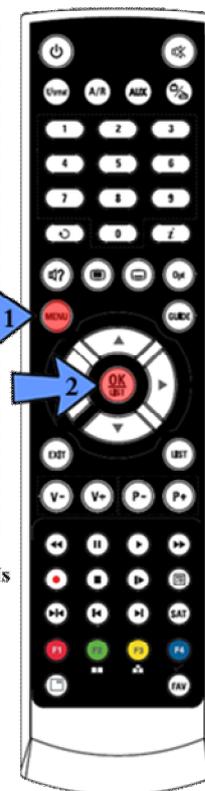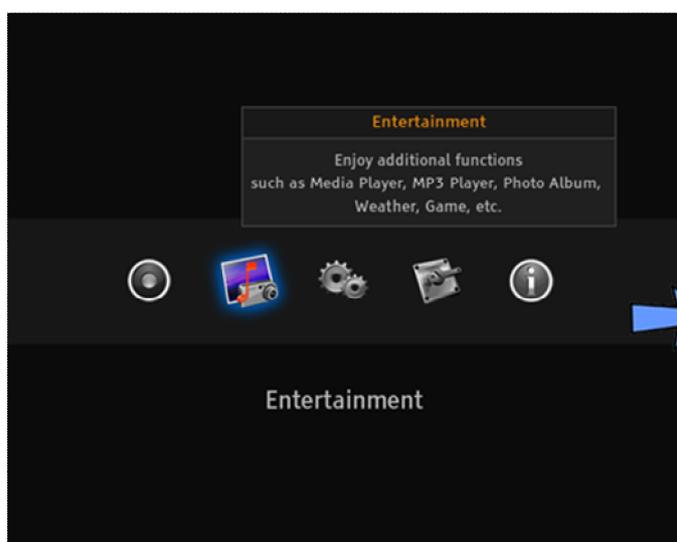



After you have either connected to your router via DHCP or STATIC it is recommended that you perform a quick by check the weather. Keep pressing the Menu button until you reach the main menu and head to Entertainment and press OK.

Step 12

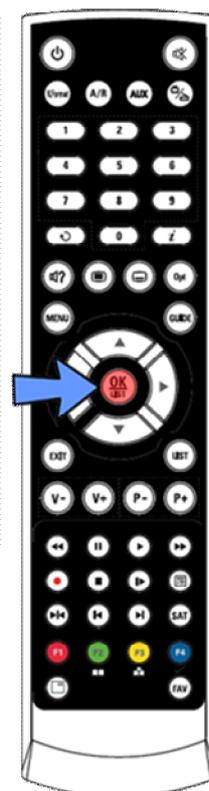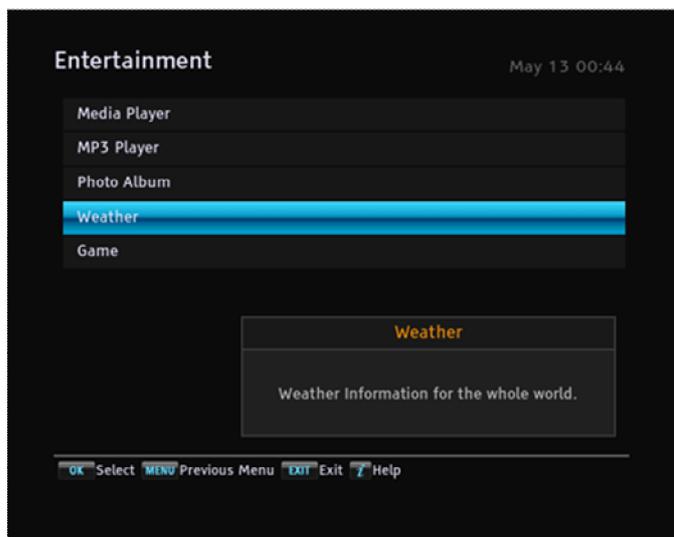

Now head down to Weather and press OK.

Step 13

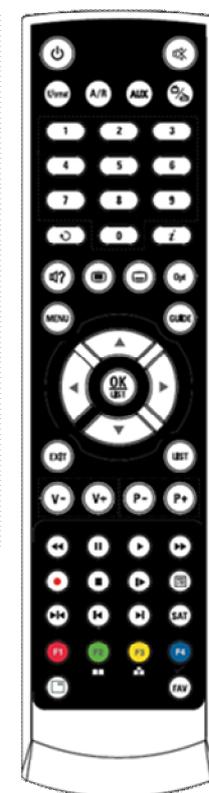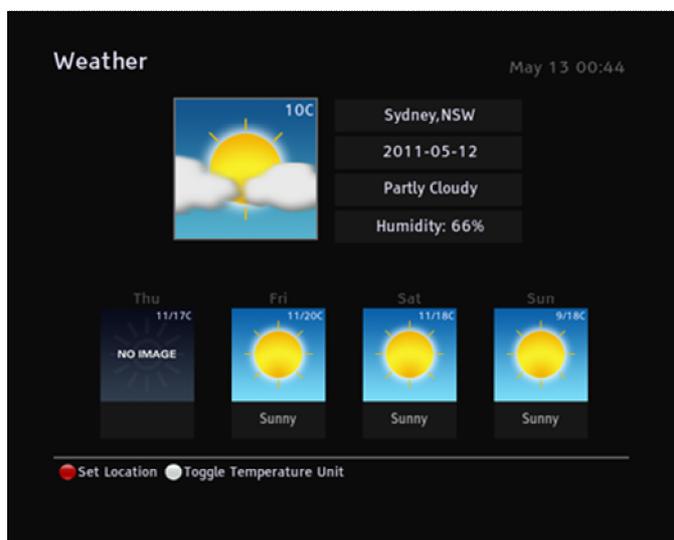

Once the weather forecast appears on your screen you have successfully connected to your router.

Step 14**Troubleshooting**

If have problems connecting to your router please check the following

1. You are using a TOPFIELD dongle (these can be purchased from our website)
 2. Check that you are using the correct Security Mode as set on your router.
 3. That you have a wireless router and not a modem.
 4. Make sure that enter you password in the correct upper or lowercase.
 5. You might have mac filtering enabled if so you will need to add the topfield dongles mac address to your list, the mac address is on the dongle.
 6. If you have alot of walls between your router and the unit this can reduce signal quality.
 7. Check that your router is on
 8. Try resetting your router and try again
-