

skippa™ Quick Setup Guide



Setting up your new SKIPPA™ is a simple 3 step process:

Step 1. Connect your SKIPPA™

- Connect the **HDMI cable** from your SKIPPA to your TV.
- Connect the **antenna cable**.
- Connect the **power cable** and turn on SKIPPA. Turn on your TV and select input source.
- Connect to your network via either an **ethernet cable** or the built-in **WIFI**. If using an **ethernet cable**, skip Step 2.

Step 2. Connect to your WIFI

Press  to configure your WIFI network:

- Set network mode to **WIFI**.
- Make sure **AUTOMATIC CONFIGURATION** is selected.
- Highlight **CHOOSE NETWORK** and press  to select your WIFI network.
- Highlight **PASSWORD** and press  to open the on-screen keyboard. **Enter your WIFI password**. You can switch to **SYMBOLS** by pressing . Once finished press  to SAVE your password.
- **Press**  to connect to your WIFI network.

A status message will confirm the internet is available. **Press Exit**.

Step 3. Log into IceTV on your SKIPPA™

- Skippa requires an **IceTV account**. If you don't already have an account, you can create one by selecting **NEW USER**, and creating a password. If you have an account, or are using the free IceTV app, choose **EXISTING USER**.
- Enter your **EMAIL ADDRESS** in the field provided.
- Enter your **PASSWORD** in the field provided.
- Press **CONTINUE** to proceed.
- For **NEW USERS**, select your **REGION** e.g. NSW - Sydney.
- Give your SKIPPA a name (e.g. Lounge) or simply leave the default name, and press **CONTINUE**.

Congratulations! Press  to finish the SKIPPA Setup.

skippa™ Quick User Guide



SKIPPA's AutoSkip function is automatically enabled and detects TV adverts in your recorded shows.

The detection may take up to one-and-a-half times the duration of a recording, e.g. 45 mins for a 30 minute recording. Press **MY REC**  to view your list of recordings. Each processed recording is marked with a Blue Sparkle . All marked recordings can then be enjoyed without TV adverts. Pressing **INFORMATION**  when watching a processed recording displays all detected adverts in a timeline.

SKIPPA offers two modes for you to skip adverts: **skip them automatically (AutoSkip Mode)** or **manually (Manual Mode)**. Your remote control has 2 buttons to control the function of these modes:

AUTOSKIP button

Switch between AutoSkip Mode and Manual Mode by pressing the AutoSkip button for 3 seconds.

Press the AutoSkip button to jump to the end of the next ad-break, in either Manual or AutoSkip mode.

UNSKIP button

In rare cases, AutoSkip may skip short program material or play short adverts. If you feel that a program section has been skipped in error, press the **UNSKIP** button to return to the start of the last skipped section.

MANUAL SKIP buttons

In other rare cases, AutoSkip may miss the end of a TV advert. You can progress to the end of the ad by using the manual skip buttons.



SKIPPA offers three ways to enjoy your electronic program guide and use Smart Recording features ("IceTV"):

The IceTV **smartphone app** and **website** offer the full IceTV functionality. We have included a leaflet in SKIPPA's packaging to learn more about these features.

Alternatively, the SKIPPA **remote control** offers light IceTV functionality:

When viewing the TV guide on the SKIPPA, highlight a show and simply press **RECORD**  for a single recording. Press **SERIES TAG**  to record the entire series of the selected show.

MY SERIES  displays all the series titles that you have set to record. The episodes from these series that will be broadcast in the next 5 days are shown in **MY WEEK**.

MY WEEK  is your personal TV guide for the next 5 days. It displays all the episodes over the next 5 days that match your series in **MY SERIES**, as well as your single recordings e.g. movies.

Download the full SKIPPA manual from:

skippa.tv/manual